


# SAIS

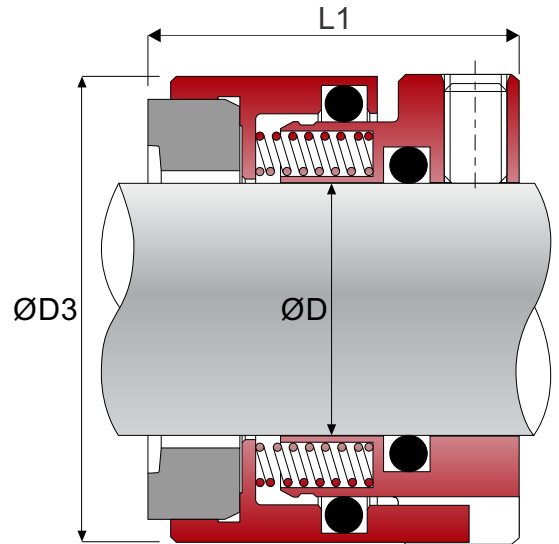

| Metric   |      | ØD3 | L1 |
|----------|------|-----|----|
| Shaft ØD | Code |     |    |
| 20       | 0200 | 34  | 20 |
| 22       | 0220 | 36  | 20 |
| 24       | 0240 | 38  | 22 |
| 25       | 0250 | 39  | 23 |
| 28       | 0280 | 42  | 23 |
| 30       | 0300 | 44  | 24 |
| 32       | 0320 | 46  | 24 |
| 33       | 0330 | 47  | 24 |
| 35       | 0350 | 49  | 24 |
| 38       | 0380 | 54  | 27 |
| 40       | 0400 | 56  | 28 |
| 43       | 0430 | 59  | 28 |
| 45       | 0450 | 61  | 28 |
| 48       | 0480 | 64  | 28 |
| 50       | 0500 | 66  | 27 |
| 53       | 0530 | 69  | 27 |
| 55       | 0550 | 71  | 27 |
| 58       | 0580 | 78  | 29 |
| 60       | 0600 | 80  | 29 |
| 63       | 0630 | 83  | 32 |
| 65       | 0650 | 85  | 32 |
| 68       | 0680 | 88  | 32 |
| 70       | 0700 | 90  | 32 |
| 75       | 0750 | 99  | 32 |
| 80       | 0800 | 104 | 32 |
| 85       | 0850 | 109 | 32 |
| 90       | 0900 | 114 | 38 |
| 95       | 0950 | 119 | 38 |
| 100      | 1000 | 124 | 38 |